



# LÂZZÛR

LIGHTING COMPANY

## PRODUCT CARE GUIDE

# PRODUCT CARE GUIDE



**Prior to beginning to clean your lighting fixture, make sure to turn off the power at the wall switch.**

---



**Regular cleaning and maintenance will ensure that the fixture is properly illuminating the space that it occupies.**

---




**Remove the lightbulbs and wipe them with a soft cloth. Avoid scrubbing too hard to avoid shattering or damaging the lightbulb.**

---



**To clean pendant lights and chandeliers, use a damp cloth to clean the globes, cables, and extension rods.**

---

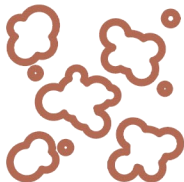


**Regular dusting should occur to keep the fixture in its pristine condition.**

---



**We recommend a weekly thorough dusting using a feather duster to dust those hard-to-reach places on a chandelier or a pendant.**


# PRODUCT CARE GUIDE

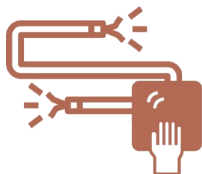

Pendant cables can be regularly wiped down with a cloth to avoid dust from settling.



Avoid using abrasive cloths and cleaners with ammonia or alcohol as this may damage the fixture.

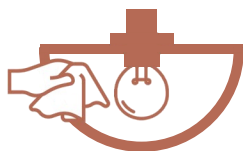

For semi-flush and flush mount fixtures, make sure to regularly remove the globe from its base and dust inside. The globe can be wiped down with a moist microfiber




## FOR SHADES, PLEASE FOLLOW THE TIPS BELOW:



### GLASS SHADES

Use a soft damp cloth to clean or soapy water for tough to remove dirt or stains.

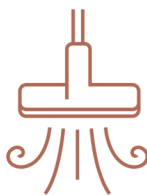

### FABRIC SHADES

Vacuum gently to remove any build up of dirt or dust. If there are any serious stains, a dry-cleaning product can help remove these.



### GLASS SHADES

Simply wipe paper shades with a dry cloth and clean the dust. Canned air can also be used to remove any dust. Do NOT use damp products on paper shades.



### GLASS SHADES

Wipe down using a lint-free cloth. For high-shine finishes, use a metal or glass cleaner to get rid of those stubborn spots.



Any glass shades should be hand-washed. DO NOT place in the dishwasher. This can damage the appliance.